


# AIR MIX CONTROL SERVO MOTOR (for Automatic Air Conditioning System)

## COMPONENTS

AIR CONDITIONING RADIATOR ASSEMBLY

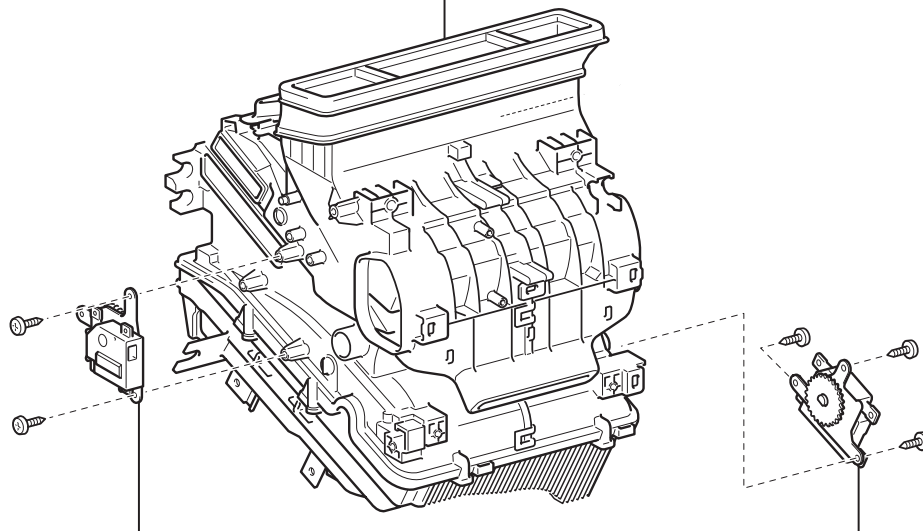

AIR MIX CONTROL SERVO MOTOR

AC

## REMOVAL

### 1. REMOVE AIR CONDITIONING UNIT



- Remove the air conditioning radiator (see page [AC-185](#)).

### 2. REMOVE AIR MIX CONTROL SERVO MOTOR (See page [AC-191](#))

## INSPECTION

### 1. INSPECT AIR MIX CONTROL SERVO MOTOR

- Inspect the servo motor operation.

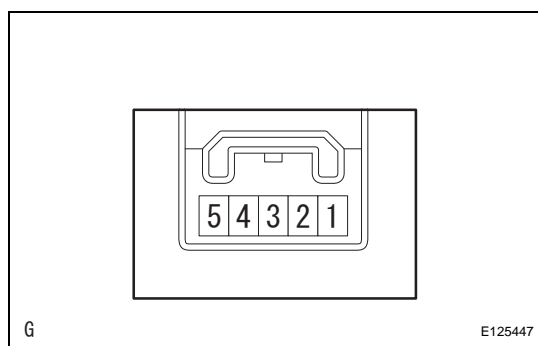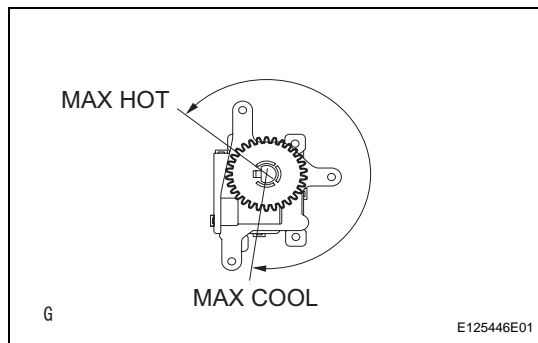

- Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, and then check that the lever turns to the "MAX HOT" position smoothly.
- Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, and then check that the lever turns to the "MAX COOL" position smoothly.

If the operation is not as specified, replace the air mix control servo motor.

## **INSTALLATION**

- 1. INSTALL AIR MIX CONTROL SERVO MOTOR (See page [AC-196](#))**
- 2. INSTALL AIR CONDITIONING UNIT**
  - (a) Install the air conditioning radiator (see page [AC-197](#)).